


Gas-cooking guide

Brandt

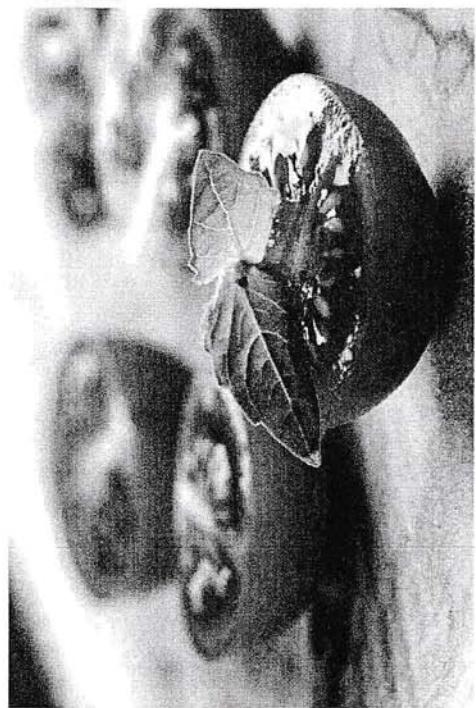

	DISHES	TIME	EXTRA-FAST	SEMI-FAST
SOUPS	Broths Thick soups	8-10 minutes	x	
FISH	Court-bouillon Grilled	8-10 minutes 8-10 minutes	x x	
SAUCES	Hollandaise, Bearnaise Bechamel, Aurore	10 minutes	x x	
VEGETABLES	Endives, spinach Peas in sauce Provence tomatoes Fried potatoes Pasta	25-30 minutes 15-20 minutes	x x x x	
MEAT	Steak Blanquette, Osso-bucco Fried escalope Tournedos	90 minutes 10-12 minutes 10 minutes	x x x	
FRYING	Chips Fritters		x x	
DESSERTS	Rice pudding Stewed fruit Pancakes Chocolate Custard	25 minutes 3-4 minutes 3-4 minutes 10 minutes	x x x x	


GUIDE FOR INSTALLATION AND USE
ZH
EN

After Sales Service

Any maintenance on your equipment should be undertaken by:

- either you dealer,
 - or another qualified mechanic who is an authorised agent for the brand appliances.
- When making an appointment, state the full reference of your equipment (model, type and serial number). This information appears on the manufacturer's nameplate attached to your equipment.

氣體煮食爐 COOKING GAS HOB

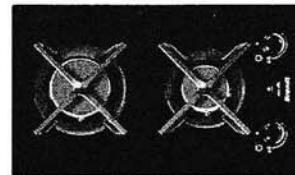

CZ5703587_00 - 06/18

BPG6220*

DEAR CUSTOMER,

Discovering a Brandt product means experiencing the range of unique emotions.

The attraction is immediate, from the moment you set eyes on the product. The sheer quality of the design shines through, thanks to the timeless style and outstanding finishes which make each component an elegant and refined masterpiece in its own right, each one in perfect harmony with the others. Next, comes the irresistible urge to touch it.

Brandt design makes extensive use of robust and prestigious materials, where the accent is placed firmly upon authenticity. By combining state-of-the-art technology with top quality materials, Brandt produces beautifully crafted products to help you get the most from the culinary arts, a passion shared by all lovers of cooking and fine food. We hope that you enjoy using this new appliance.

Thank you for choosing a Brandt product.

Contents

	PAGE
Using your hob in complete safety	21-23
What's your hob looks like	24
Installation your hob in all simplicity	24
• Fitting recommendations	24-26
• Electrical connections	27
• Connecting the gas supply	28
• Changing the type of gas (LPG)	29-30
Using your hob in all simplicity	31
• How to use your gas burners	31
• Pans to use?	32
How to look after your hob?	33
Minor troubleshooting	34
Gas cooking guide	35

In the manual:

A Display safety instruction

Q Display tips and hints

A YOUR HOB IS DELIVERED PRE-SET FOR USE WITH HONG KONG TOWN GAS.

Your hob in complete safety

IMPORTANT SAFETY INSTRUCTIONS – READ CAREFULLY AND RETAIN FOR FUTURE USE.

This guide can be downloaded from the brand web site.

 
- o **WARNING :** this appliance may be used by children aged 8 years and older, and by persons with impaired physical sensorial or mental capacities, or without experience or knowledge, if they are supervised or have received prior instructions on how to use the appliance safely and have understood the risks involved.
 - o Children must not be allowed to play with the appliance.
 - o Cleaning and maintenance operations must not be carried out by children without supervision.
 - o Children must be supervised to ensure that they do not play with the appliance.
 - o It must be possible to disconnect the appliance from the power supply, either using a plug or by fitting a switch on the fixed wiring system in accordance with installation rules.
 - o The electrical plug must remain accessible after installation.
 - o If the power cable is damaged, it should be replaced by the manufacturer, its after-sales service department or by a similarly qualified person in order to avoid danger.
 - o Do not use steam cleaning appliances.
 - o The appliance is not designed to be switched on using an external timer or a separate remote control system.
- o **WARNING :** leaving a hob unattended when cooking with fat or oil can be dangerous and could cause a fire.
 - o Never try to extinguish a fire with water but switch off the appliance, then cover the flame with a lid or a fire blanket.
- o **WARNING :** fire risk: do not store any items on the cooking surfaces.
- o This appliance is not connected to a system for evacuating combustion products. It must be installed and connected in compliance with current regulations. Particular attention should be given to applicable ventilation requirements.

Your hob in complete safety

- o The use of a gas hob produces both heat and humidity in a room. Ensure that the kitchen is well ventilated: keep mechanical ventilators open. Prolonged, intensive use of the hob may require additional ventilation, by opening a window, for example, or ventilating the room more efficiently by increasing the setting on mechanical ventilation, where installed.
 - o Do not use cookware that overhangs the edge of the hob.
 - o This hob has been designed for use by private persons in their homes.
 - o This appliance must be installed in compliance with current regulations and only used in a well ventilated area. Consult this guide before installing and using your appliance.
 - o You should never leave cooking unattended.
 - o These hobs are designed exclusively for cooking drinks and foodstuffs and do not contain any asbestos-based component parts.
 - o Never leave any or products in the cupboard beneath your hob (aerosols or other pressurized cans, papers, recipe books, etc.).
 - o If you have a drawer underneath the hob, we recommend avoiding placing objects in it that are temperature sensitive (plastics, paper, aerosols, etc.).
 - o Prior to installation, ensure that the local distribution conditions (type of gas and gas pressure) and the appliance's settings are compatible.
 - o The settings for this appliance are stated on the label inside the wallet or on the information plate.
 - o Disconnect your hob from both electrical and gas supplies before carrying out any maintenance operations.
 - o When connecting electrical appliances to a nearby socket, ensure that the power supply cable is not in contact with any hot surface on the appliance.
 - o If a knob is difficult to turn, call your installer immediately.
 - o For safety reasons, after use, do not forget to close the main gas valve for mains gas lines or the valve on the top of your butane/propane gas cylinder.

- o The conformity CE mark is applied to all these hobs.
- o This appliance should be installed by a qualified technician / installer.
- o Never use aluminium foil for cooking. Never place products wrapped in aluminium foil or in aluminium trays on your hob. The aluminium will melt and permanently damage your appliance.
- o To find your appliance's references easily, we recommend that you note them on the "After sales Service and Customer Relations" page (this page also explains where to find them on your appliance).
- o **WARNING:** If a crack appears in the surface of the glass, disconnect your appliance from the power supply to avoid electric shock.



- WARNING :** Use only hob guards designed by the manufacturer of the cooking appliance or indicated by the manufacturer of the appliance in the instructions for use as suitable or hob guards incorporated in the appliance. The use of inappropriate guards can cause accidents.
- o This hob complies with standard EN 60335-2-6, as it applies to heat build-up in class 3 appliances and the implications for their installation (in compliance with standard EN 30-1-1).
 - o Use approved gas tubing bearing EMSD approval marking (such as : 機電工程署批准EMSD APPROVAL GTXXXX) for connection to appliances, or other appropriate methods accepted by EMSD.



CARING FOR THE ENVIRONMENT

This appliance's packing materials are recyclable. Recycle them and help to protect the environment by disposing of them in the council receptacles provided for this purpose.Your appliance also contains various recyclable materials. It is therefore marked with this logo to indicate that, in European Union countries, used appliances must not be mixed with other waste. Appliance recycling organised by your manufacturer will thus be carried out in optimum conditions, in accordance with European directive 2002/96/EC on waste electrical and electronic equipment. Consult your local authority or your retailer to find the dropoff points for used appliances nearest to your home. We thank you for your help in protecting the environment.

BPG6220B

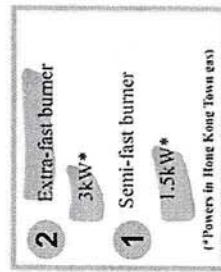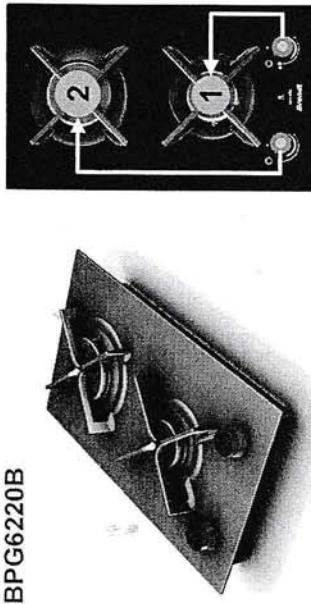

Installing your hob in all simplicity

Fitting recommendation

	Width	Depth	Height
Standard cutout	26,5 cm	48 cm	5,1 cm
Outside dimensions above the work surface	30,5 cm	52 cm	4,9 cm

- According to the Gas Safety Regulations of Hong Kong, any gas installation works including the installation of appliances and connection tubing, must be undertaken by registered gas installers who are registered for that appropriate classes and be employed by registered gas contractors.
- Prior to installation, ensure that the local distribution conditions (nature of the gas and gas pressure) and the adjustment conditions of the appliance are compatible.

This appliance must be installed and connected in compliance with the regulations in force, and used only in a well-ventilated area. Consult the instructions before installing and using this appliance. Since this appliance is not connected to a combustion products evacuation device, particular attention should be given to the relevant requirements regarding ventilation. On this subject, combustion can take place only if oxygen from the air is present, so this air must be constantly renewed and the combustion products must be evacuated (a minimum air input of 2 m³/hour per kW of gas energy is required).

E.g.: Hob with 2 gas-rings
Total power: 4.5kW
4.5 kW x 2 = 9m³/h minimum flow-rate.

Fitting recommendations (cont'd)

The hob must be built into the worktop of a support cupboard. This worktop must be at least 3 cm thick and heat-resistant or else coated with a heat resistant material.

Please check that there is provision for ventilation at the cabinet to ensure proper operation of the gas hob.

A side-clearance of at least 30cm should be left to the right and left of the hob, 5,3cm from the rear wall.

And a side-clearance of at least 40cm should be left to the right and left of the burner, 12cm from the rear wall.




A tall cupboard or partition too close to the hob would hinder free movement of kitchen utensils.

If a horizontal partition is put under the hob, it must be placed between 10 and 15 mm from the bottom of the work top. In any case, do not keep any sprays or pressurized containers in the compartment which could be just under the hob.

To ensure sealing between the cupboard and the worktop follow points below:


- 1- Remove the pan support grates, the burner caps and heads after checking their position.
- 2- Turn the hob over and place it gently over the opening in the worktop paying attention not to damage the control knobs and lighters.

- 3- Stick the foam seal around the outside of the hob.
- 4- Put the hob back the right way up and place the burners, caps and pan grates back in position.

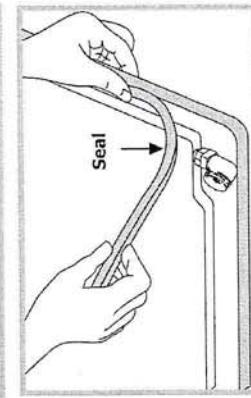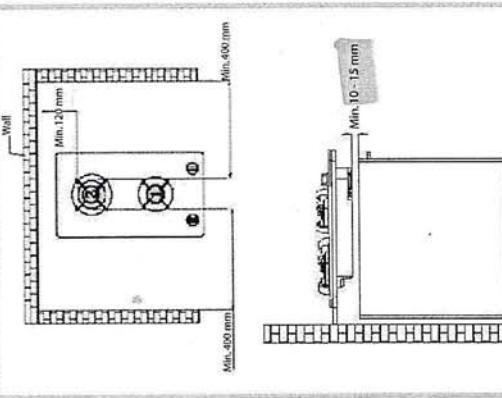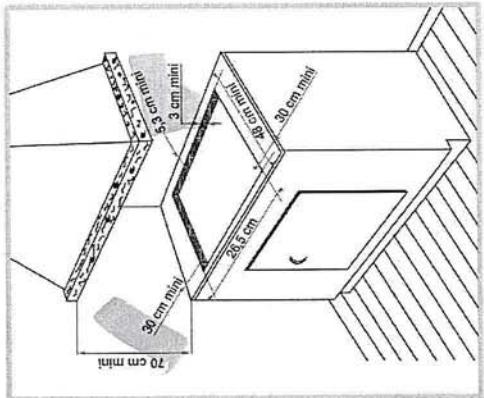

Fixing Worktop

- Place the hob in position in the cutout on the worktop, pulling it forward as far as possible.
- Put the burners, caps and pan grates back in position.
- Connect the hob power supply cable to the electrical installation of the kitchen. (See "Electrical connections").
- Connect the hob to the gas.

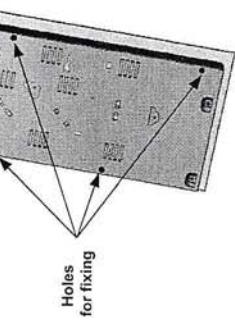

If you wish you can lock the hob into position using attachments that come with screws (see right picture) and are secured to the corners of the housing.


Only use the holes provided.

Stop screwing when the lug starts to bend.

Do not use a power screwdriver.

The panel of this built-in hob is made of tempered glass which is safer than normal glass for this application. However, the following safety precautions for using built-in hob with glass top panel should also be noted in order to prevent the glass top panel from breaking :

1. Clean the burner assembly frequently to maintain a clear gas passage on the flame distributor. Clean and tidy up the flame distributor after spillage of food and liquid once the burner assembly cooled down.
2. Turn off the gas appliance immediately if abnormal noise propagates from the gas appliance and contact gas supply company or gas hob importer for inspection.
3. Do not use oversized utensils for cooking.
4. Do not impact the glass surface with hard objects or place heavy objects on the glass surface

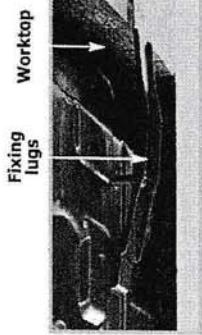

Fixing lugs

Fitting recommendations (cont'd)


Electrical connections

Connecting the gas supply

- Preliminary remarks

! Warning

CROSS-SECTION OF CABLE TO BE USED:	
220-240 V _n - 50 Hz	H05V2V2F cable - T90
3 conductors including 1 ground	Cross-section of conductors in mm ² : 1 Fuse: 5 A

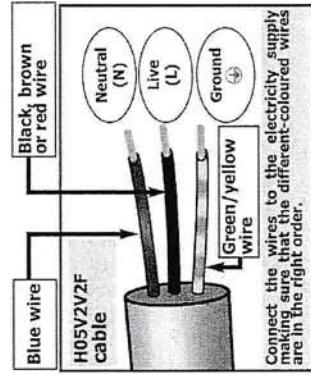

In HONG KONG, you must use 3-pin plug that comply with the cut-off device with a contact opening by at least 3,5mm.

In HONG KONG, you must use 3-pin plug that comply with the relevant safety standard BS 546.

The mains plug must be accessible after installation.

! Your appliance is sold pre-set for TOWNGAS.

If the hob is installed above an oven or if the proximity of other heat generating elements threatens to cause the connection to heat up, it is vital that the connection be made using a rigid pipe and the appliance should be properly mounted. If a hose or soft pipe is used, it must not come into contact with any of the unit's moving parts or enter an area that is likely to be obstructed.

The gas supply must be connected in line with current regulations in the country of installation.

- Town gas connection

Use approved gas tubing bearing EMSD approval marking such as: (機電工程署批准EMSD APPROVAL GTXXXX) for connection to appliances, or other appropriate methods accepted by EMSD.
Connect to Elitre model no: EL-125 of external gas governor (working pressure 1kPa).


- Gas rating



The safety wire (green/yellow) is connected to the ground terminal of the appliance and must be connected to the ground terminal of the installation. The fuse in your set-up must be 5 amperes. If the power cable is damaged, it must be replaced by a cable or a special kit available from the manufacturer or his After-Sales Service.

MARK ON THE INJECTORS
This table shows the position of the injectors on your hob depending on the type of gas you use. The number is marked on each injector.

TOWNGAS

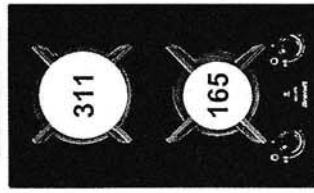

Appliance designed for installation in HONG KONG - SINGAPORE	TOWNGAS HONG KONG - 10 mbar	TOWNGAS SINGAPORE
Hourly input - see below at 15°C at 1013 mbar	(kW) (m³/h)	(kW) (m³/h)
EXTRA FAST BURNER	311 3.0 0.7 680	311 3.0 0.7 680
Indicator marked on injector	(kW) (m³/h)	(kW) (m³/h)
Nominal heat rating	311 3.0 0.7 680	311 3.0 0.7 680
Low heat rating	(kW) (m³/h)	(kW) (m³/h)
Hourly output	165 1.5 0.5 340	165 1.5 0.5 340
SIMI-FAST BURNER	(kW) (m³/h)	(kW) (m³/h)
Indicator marked on injector	165 1.5 0.5 340	165 1.5 0.5 340
Nominal heat rating	(kW) (m³/h)	(kW) (m³/h)
Low heat rating	(kW) (m³/h)	(kW) (m³/h)
Hourly output	4.5 1020	4.5 1020
30 cm hob 2 gas rings		
Total nominal heat rating		
Maximum output		

Changing the type of gas

➤ SWITCHING FROM TOWNGAS TO
LPG GAS FOR HONG KONG.

Connecting the gas supply


● FOR HONG KONG : LPG CONNECTION Gas supplied by tank or cylinder

For your safety, you must choose this connection :

- **Connection with a reinforced rubber hose with screw-on mechanical connectors.**

In an existing system, a soft pipe fitted with clamps whose service life is five years may be used. It is necessary in this case to use an adaptor without forgetting to fit a sealing washer between the adaptor and the hob's elbow.

Tip
You can obtain the adaptor and the sealing washer from your After-Sales Service Department.

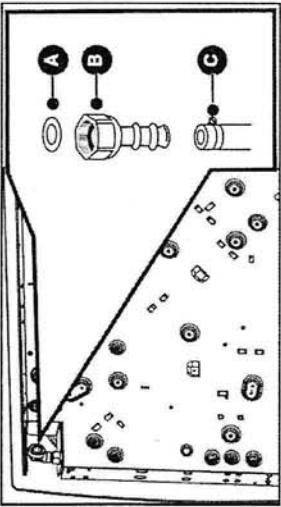

- A Seal (not provided)
- B Adaptor (not provided)
- C Clamp (not provided)

Warning
A Screw on the adaptor with a torque
not exceeding 25 N.m.

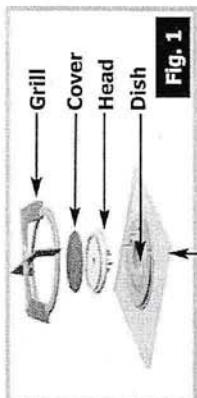


Fig. 1
Upper side of the hob

When carrying out this operation, you should successively:

- Change the injectors
- Adjust the retarder on the taps


CHANGE THE INJECTORS in the following way:

- Remove the supports, and all the burner caps and heads.
- Using the spanner supplied, unscrew the injectors at the bottom of each dish and remove them (fig. 1).
- Replace these with the injectors supplied in the wallet, in accordance with the gas rating table at the end of the chapter; to do this:
 - Screw in the injectors by hand until they are tight.
 - Put the spanner well onto the injector.
 - With a pencil draw a line on the hearth plate as indicated (fig. 2).
 - Turn the spanner clockwise until the line appears on the other side (fig. 3).
- Warning! Do not go beyond this limit as you are liable to cause damage.**
- Put the burner heads, covers and pan supports back in position.

Adjust the retarder on the taps

- Using a small flat-head screwdriver, screw in the brass burner-power screws (yellow) **all the way**, (fig. 1.) **screwing them in a clockwise direction.**
- Replace the gaskets and the knobs, paying careful attention to their direction and ensuring that the knobs are pushed in all the way.
- Put the burner heads, covers and pan supports back in position.


Fig. 1

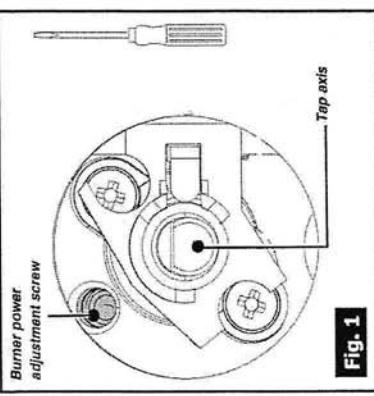

Gas rating

	LPG G30 28/30 mbar
Appliance designed for installation in HONG KONG - SINGAPORE Hourly input - see below at 1013 mbar	
EXTRA FAST BURNER Indicator marked on injector	(kW) (kW) (l/h)
Nominal heat rating	0.830
Low heat rating	0.225
Hourly output	
SEMI-FAST BURNER Indicator marked on injector	(kW) (kW) (l/h)
Nominal heat rating	0.620
Low heat rating	0.109
Hourly output	
30 cm hob 2 gas rings Total nominal heat rating	4.6
Maximum output	334

MARK ON THE INJECTORS
This table shows the position of the injectors on your hob depending on the type of gas you use. The number is marked on each injector.

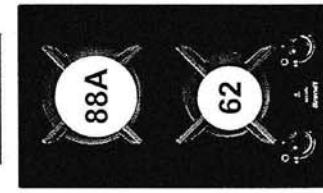

Using your hob in all simplicity

Which pans are best adapted for use on the gas burner?

- Recommended pan sizes:

Extra burner	Small burner
Extra-fast	Auxiliary
18-28cm	12-16cm

- To ignite a burner, press down and turn the knob anti-clockwise until it is pointing to the maximum position .

Keep the knob pressed down. This will trigger off a series of sparks that will light up the burner.


- Adjust the flame to the height you require by turning the control knob between the 

! To set off the safety system, keep the knob pressed completely down for a few seconds after the flame has  up.

! Do not use a aluminium cover. Using aluminium cover may cause abnormal combustion.

Warning statement - In the event of the burner flames being accidentally extinguished, turn off the burner control and do not attempt to re-ignite the burner for at least 1 min.

- (e.g.  Right back burner)

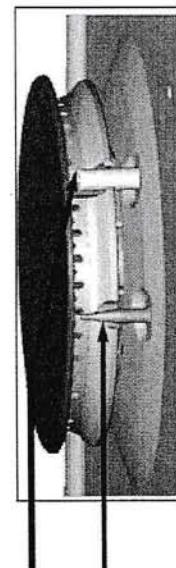


Sparker
Gas safety device

Keep all natural air-vents open or have a mechanical ventilation system installed (a mechanically ventilated hood).
- Prolonged, intensive use of the hob may require extra ventilation; by opening a window for example or producing more efficient ventilation by increasing the power of the existing mechanical ventilation (a minimum air input of 2m³/hour per kW of gas energy is required.)

- If ever your flame goes out, relight it as per normal procedure.

How to look after your hob?

Keeping your hob in good condition is easy if you clean it before it is completely cold. Even so, never clean it when it is in use. Put all the electric and gas control knobs at zero.

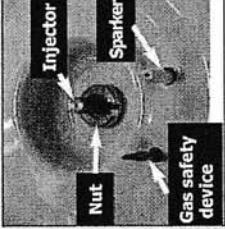HOW TO PROCEED	ACCESSORIES TO BE USED
Looking after sparkers and injectors	<ul style="list-style-type: none"> - If ever the sparkers get dirty, clean them with a stiff non-metallic brush. - The gas injectors are in the centre of each burner in the form of a "pot". Make sure not to block them up partially when cleaning the hob, as this will considerably reduce the performance of your gas-rings. 
Looking after the grills and burners	<ul style="list-style-type: none"> - Use a non-abrasive cream for removing any persistent stains. Then rinse with clean water. Dry each burner element carefully before re-lighting your hob. - Non-abrasive cream. - Household sponge.

Minor troubleshooting

You have doubts about whether your hob is working correctly. This does not necessarily mean there is a breakdown. Nevertheless, check the following points

IF YOU REALIZE THAT	WHAT SHOULD YOU DO?
Lighting the burners: There is no sparking when the control knobs or buttons are pressed down.	<ul style="list-style-type: none"> - Check the electrical connections on the hob. - Check that the sparkers are clean. - Check that the burners are clean and in position. - If the hob is fixed to the worktop, make sure that the fixing clamps have not been twisted. - Check that the sealing rings have not come out of place.
When you only press down one control knob all the burners spark.	<p>This is normal. The lighter system is centralised, and all the burners spark at the same time.</p> <ul style="list-style-type: none"> - Check that the gas inlet pipe has not been squashed. - Check that the gas inlet pipe tube is less than 2m long. - Check that the main gas tap is open. - If you use gas tanks or cylinders check that they are not empty*. - If you have just installed your hob or changed a gas cylinder, keep the control knob wide open for a few seconds so that the gas can get through. - Make sure the injector is not blocked up. If this is the case, clear it with a safety pin. - Light up your gas-ring before putting a pan on it.
Sparking takes place but the burners do not light up.	<ul style="list-style-type: none"> - Push the control knob down completely and keep it under pressure for a few seconds after the burner has lit. - Check that the burner parts are in place. - Check that the sealing rings under the control knobs have not come out of place. - Avoid any severe drafts in the room. - Light the burner before putting your pan on it.
If your table is fitted with a gas safety system and the flames go out as soon as you release the control knob.	<ul style="list-style-type: none"> - Avoid any severe drafts in the room. - Check that the gas you are using corresponds to the injectors that have been installed (See injector identification in the "Gas Rating" chapter). - Remember that gas hobs are delivered preset for use with HONG KONG town gas. - Check the adjustment of the low power screw (See paragraph "Changing the type of gas supply").
Flames are irregular.	<ul style="list-style-type: none"> - Check that the burners and injectors are clean and assembled correctly. - Check you have enough gas in your gas cylinders*.
The knobs get hot during cooking.	<ul style="list-style-type: none"> - Use small pans on the burners next to the control knobs. Large pans are to be put on the large burners furthest away from the knobs. - Put the pan in place with the burner in the middle. The pan should not be above the control knobs.

*Not applicable in Hong Kong.